



To keep your Cardboard Waste Box clean and in top condition, follow these simple maintenance instructions:

Cleaning the lid

- Protective coating: The top of the lid has a special waterproof coating that makes cleaning easy. Use a slightly damp microfibre cloth to effectively remove spilt dirt such as coffee, tea, chocolate or food residues.
- Regular maintenance: To optimise the appearance and hygiene of your waste box, we recommend cleaning the lid at least twice a week.
- Dried-in stains: Our less environmentally damaging coating has been tested to easily remove dried-in stains and prevents dirt from settling. This contributes to the product's durability.

Cleaning inside and outside

- Inside: The inside of the waste box stays clean by using a waste bag folded well around the top edge. For best protection, we do not recommend using biodegradable bags, as they offer less protection.
- Exterior: To clean the exterior, a dry microfibre cloth is sufficient. This helps to remove dust and light stains without damaging the cardboard.

Following these maintenance guidelines will keep your bin hygienic, clean and functional, allowing you to enjoy your durable purchase for years to come.

Recommended waste bag sizes for different height dimensions of the waste box:

Height measurement of 60 cm: Use a 70x110 cm waste bag with a thickness of 40 my.

Height measurement of 80 cm: Use an 80x110 cm waste sack with a thickness of 40 my.

Height measurement of 100 cm: Use an 80x120 cm rubbish bag with a thickness of 40 my.

Cleaning with a slightly damp microfiber cloth.



The result before and after cleaning.



Water resistance of coating Wet top surface



Result after drying

